VOICE MESSAGE

The Message Waiting Indicator on the idle screen indicates that you have new voice messages waiting. The Message key LED lights up.

To listen to voice mail message:

- 1. Press Message or the CONNECT soft key.
- 2. Follow the voice prompts to listen to your voice messages.

CUSTOMIZING YOUR PHONE

- 1. Press the **HISTORY** soft key when the phone is idle, press or v to scroll through the list.
- 2. Select an entry from the list, you can do the following:
- Press the **SEND** soft key to place a call.
- Press the **DELETE** soft key to delete the entry from the list

If you press the **OPTION** soft key, you can also do the following:

Select **DETAIL** to view detailed information about the entry.

Select **ADD TO CONTACT** to add the entry to the local directory.

Select ADD TO BLACKLIST to add the entry to the blacklist.

Select **DELETE ALL** to delete all the entries from the list.

Contact Directory

To add a contact:

- 1. Press the DIR soft key when the phone is idle, and then select LOCAL DIRECTORY->CONTACTS
- 2. Press the ADD soft key to add a contact.
- 3. Enter a unique contact name in the **NAME** field, and enter the phone number in the proper field.
- 4. Press the **SAVE** soft key to accept the change.

To edit a contact:

- 1. Press the DIR soft key when the phone is idle, and then select LOCAL DIRECTORY->CONTACTS.
- 2. Press ^ or v to select the desired contact, press the OPTION soft key and then select **DELETE** from the prompt list.
- 3. Update the contact information.
- 4. Press the **SAVE** soft key to accept the change.

To delete a contact:

- 1. Press the DIR soft key when the phone is idle, and then select LOCAL DIRECTORY->CONTACTS.
- 2. Press ^ or v to select the desired contact, press the **OPTION** soft key and then select **DELETE** from the prompt list.
- 3. Press the **OK** soft key when "Delete Selected Item?" prompts on the LCD screen.

NOTE: You can add contacts from the call history easily. For more information, refer to **CALL HISTORY** above.

Volume Adjustment

- Press during a call to adjust the receiver volume of the handset/speakerphone/headset.
- Press _____ when the phone is idle to adjust the ringer volume.

Ring Tone

- 1. Press the **MENU** soft key when the phone is idle, and then select **SETTING->BASIC SETTINGS->RINGTONES**
- 2. Press (^) or (v) to select the desired ring tone.
- 3. Press the **SAVE** soft key to accept the change.




Telrad Futuro 22



Basic User Guide

www.telradinternational.com

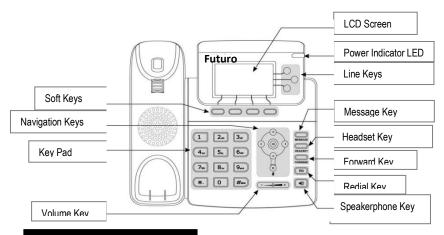

BASIC CALL FEATURES

Placing a Call

Using the handset:

- 1. Pick up the handset.
- 2. Enter the number, and then press the **SEND** soft key.

Using the speakerphone:

- 1. With the handset on-hook, press
- 2. Enter the number, and then press the **SEND** soft key.

Using the headset:

- 1. With the headset connected, press Headset to activate the headset mode.
- 2. Enter the number, and then press the **SEND** soft key.

NOTE: During a call, you can alternate between headset, hands-free speakerphone and handset modes by pressing the HEADSET key or the SPEAKERPHONE key or picking up the handset. Headset mode requires a headset connected.

Answering a Call

Using the handset:

Pick up the handset.

Using the speakerphone:

Press (

Using the headset:

Press Headset
NOTE: You can ignore an incoming call by pressing the REJECT soft key.

Ending a Call

Using a handset:

Hang up the handset or press the CANCEL soft key.

Using the speakerphone:

Press or the **CANCEL** soft key.

Using a headset:

Press the CANCEL soft key.

Redial

to enter the **DIALED CALLS** list, press (^) or (v) to select the desired call, and then Press RD] or the SEND soft kev. press

twice when the phone is idle to call the last dialed number Press

Call Mute and Un-Mute

- Press (X) to mute the microphone during a call.
- Press (x) again to un-mute the call.

Call Hold and Resume

To place a call on hold:

Press the **HOLD** soft key during an active call.

To resume the call, do one of the following:

- If there is only a call on hold, press the **RESUME** soft key.
- If there is more than one call on hold, press (v) to select the desired call and then press the RESUME soft kev.

Call Transfer

You can transfer a call in the following ways:

Blind Transfer

- 1. Press TRAN or the **TRAN** soft key during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to.
- 3. Press TRAN or the **TRAN** soft key.

Semi-Attended Transfer

- 1. Press or the **TRAN** soft key during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press #send
- 3. Press TRAN or the **TRAN** soft key when you hear the ring-back tone.

Attended Transfer

- 1. Press TRAN or the **TRAN** soft key during an active call. The call is placed on hold.
- 2. Enter the number you want to transfer to, and then press #send
- 3. Press TRAN or the **TRAN** soft key when the second party answers. **Call Forward**

To enable call forward:

- 1. Press the MENU soft key when the phone is idle, and then select FEATURES->CALL FORWARD.
- 2. Select the desired forward type:

Always forward---Incoming calls are all forwarded unconditionally.

Busy forward---Incoming calls are forwarded when the phone is busy.

No answer forward---Incoming calls are forwarded when the phone is not answered after a preset time period.

3. Enter the number you want to forward to. For NO ANSWER FORWARD enter the ring time to wait before forwarding. Press the SAVE soft key to accept the change.

Call Park

- 1. Press #700 during an active call to put a call on Park. Or press your CALL PARK BUTTON if one is programmed. The system will prompt a number (701 etc.) so you know where the call is parked. Once you hear where the call is parked you can hang up.
- 2. To pick up a call from Park enter in the number the system prompted (701 etc.), press SEND. Or press the corresponding Park BLF Key.

Call Conference

- 1. Press the **CONF** soft key during an active call. The call is placed on hold.
- 2. Enter the number of the second party, and then press the **SEND** soft key.
- 3. Press the CONF soft key again when the second party answers. All parties are now joined in the conference.
- 4. Hang up the handset to disconnect all parties.

NOTE: You can split the conference call into two individual calls by pressing the **SPLIT** soft key.

Speed Dial

To Configure a speed dial key:

- 1. Press the MENU soft key when the phone is idle, and then select FEATURES->DSS KEYS.
- 2. Select the desired line key, and then press the ENTER soft key.
- 3. Select SPEED DIAL from the TYPE field, select the desired line from the ACCOUNT ID field, and enter the number in the VALUE field. Press the SAVE soft key to accept the change.

To use the speed dial key:

Press the speed dial key to dial out the preset number.